

# Assembly Instructions

# UG

## Universal Ganging Bracket



Seating

# HPFi




### Tools Needed

- Tape Measure / Ruler (at least 12")
- Phillips screwdriver (manual or power)

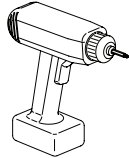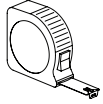


### Hardware Included

- Swivel Forked Prong
- Receiver
- Six (6) Wood Screws

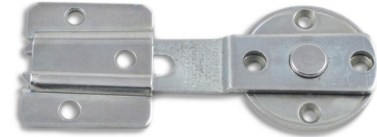

### Step 1

Place the **Swivel Forked Prong** on the bottom edge of one of the units to be connected. The bend of the fork should align with the edge of the interior frame of the seat approximately 1/2" from the finished edge. Loosely secure the **Swivel Forked Prong** using the provided wood screws.

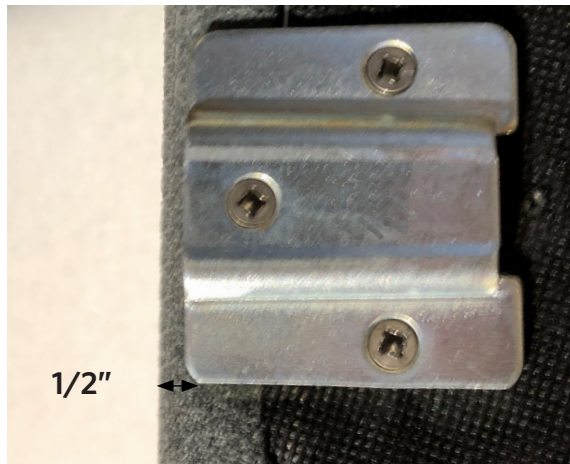

### Step 2

Place the **Receiver** on the other seating unit to be connected. The end with the wider opening should face the **Swivel Forked Prong** on the first unit. Loosely secure the **Receiver** using the provided wood screws.



### Step 3

Connect the two (2) seating units together by inserting the **Swivel Forked Prong** into the **Receiver**. The end of the "fork" should be snugly engaged just past the end of the **Receiver**. The **Swivel Forked Prong** and **Receiver** may require minimal adjustment for optimal connection prior to tightening all screws.

The connection between ganged seating units is not permanent. Seating can easily be pushed apart by placing your hand between the seats and pull apart. To reconnect, align the **Swivel Forked Prong** with the **Receiver** and re-engage the fork.

Contact the HPFi Sales or Service Team at if you need additional assistance:

(e) [info@hpfi.com](mailto:info@hpfi.com)

(p) 800.447.3462