HWTBINST

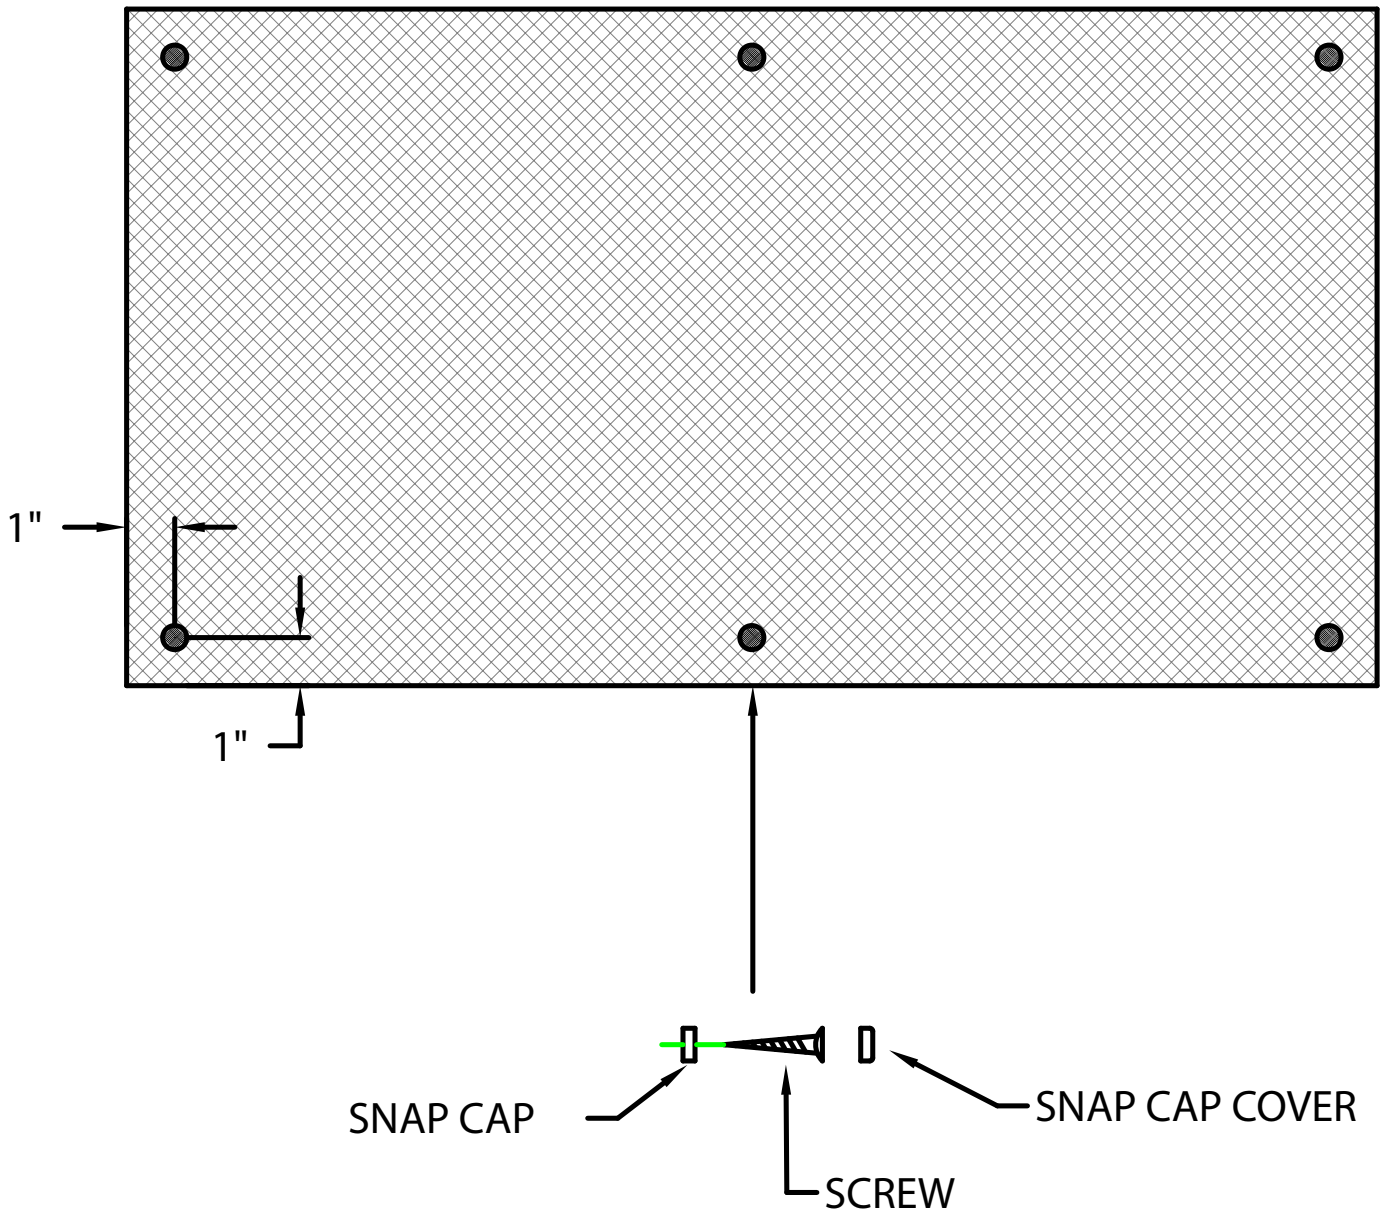

PLACE SCREW INTO SNAP CAP.
SCREW TACK BOARD IN PLACE USING DIMENSIONS SHOWN.
SNAP COVER ONTO CAP.